


**PHASEMASTER®  
ROTARY PHASE CONVERTER  
TOTALLY ENCLOSED CONSTRUCTION**

**TYPE PI**

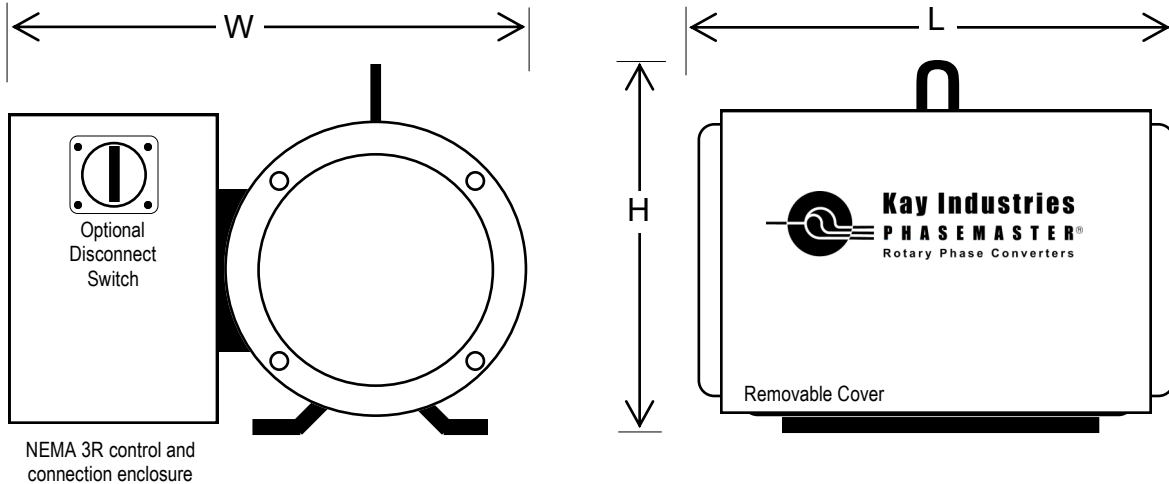

Model No.	Start HP	Max Run HP	Dimensions (inches)			
			L	W	H	Wt.
PI-6	2	4	13	16	14	120
PI-10	3	6	14	16	14	136
PI-15	5	10	17	20	14	207
PI-20	7.5	15	20	21	20	307
PI-30	10	20	22	21	20	372
PI-40	15	30	25	26	20	503
PI-50	20	40	26	28	21	720
PI-60	25	50	28	28	21	770
PI-80	30	60	31	30	24	905
PI-100	40	80	31	30	24	1005
PI-120	50	100	33	34	28	1570

Increase one model size for submersible motors  
Add suffix letter -A for automatic converter  
Add suffix letter -R for built-in disconnect switch

**NOTES:**

- This drawing applies to all types of TOTALLY ENCLOSED Phasemaster rotary converters, including those with built-in switches or automatic controls
- See Drawings 0302-PI for connection details and wire sizes
- See Drawing 0302-AUTO for complete connection details including control coordination with load
- Actual dimensions and weights will not exceed those shown



**Kay Industries**  
**PHASEMASTER®**  
Rotary Phase Converters

Corporate Office  
PO Box 1323  
South Bend, IN 46624  
800-348-5257 219-289-5932 fax

Western Region Office  
Fremont, CA

510-656-8766