
Single-Phase Input from Main Utility Supply

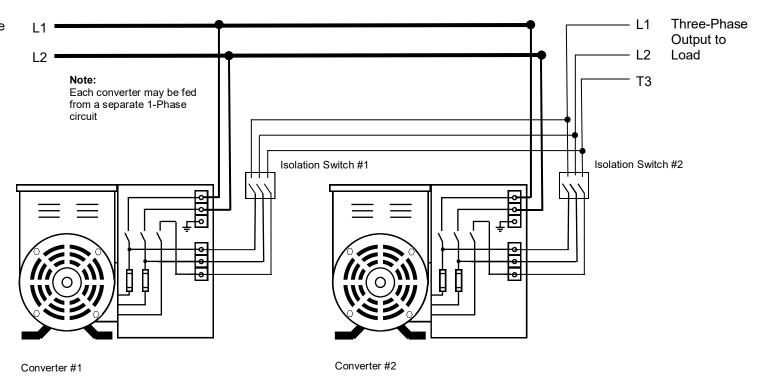

Notes:

- 1. Converters may operate independently or together.
- 2. Do not connect control circuits to the manufactured phase, T3.
- 3. Refer to drawing 0302-MA for further details of converter installation.
- 4. Converter #1 is primary converter. Converter #2 is energized when load demand exceeds capacity of converter #1.
- 5. Isolation switchers prevent back-feeding either converter when only one is running.

KAY INDUSTRIES, INC. South Bend, IN Fremont, CA SCALE: DRAWN BY: APPROVED: CONNECTION DIAGRAM FOR PARALLEL OPERATION OF PHASEMASTER TYPE MA-R DATE: DATE: DATE REVISED: DRAWING NUMBER: 3-23-1986 5-27-2016 0302-PMAR