


Single-Phase
Input from
Main Utility
Supply

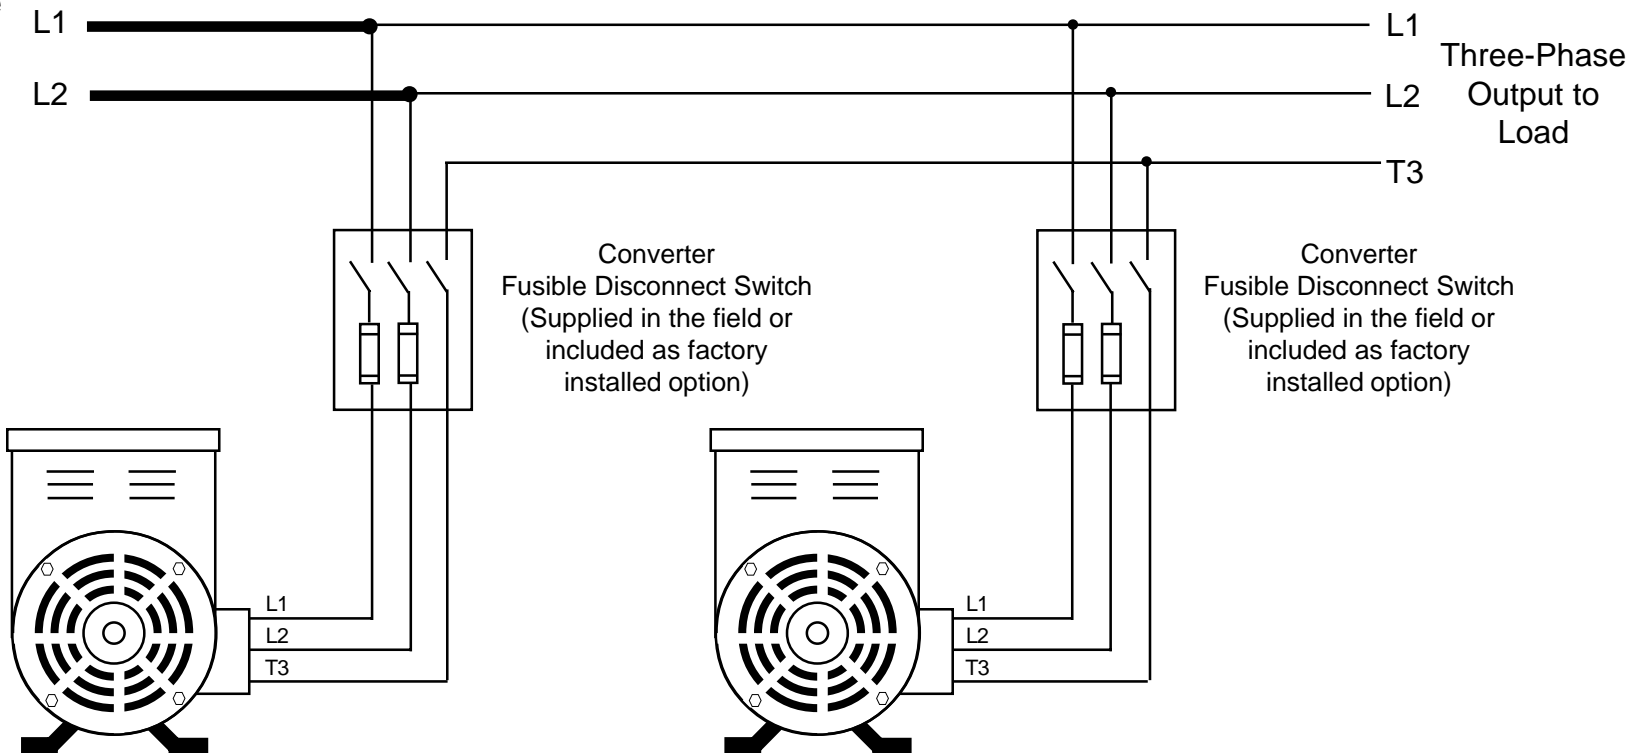

Notes:

1. Converters may operate independently or together.
2. Both converters must be rotating in the same direction
3. Do not connect control circuits to manufactured phase, T3
4. Refer to Drawing 0302-MA for further details of converter installation
5. Converter may be different HP ratings.

KAY INDUSTRIES, INC.

South Bend, IN

Fremont, CA

SCALE:

DRAWN BY:

APPROVED:

*PHASEMASTER CONVERTER CONNECTION
DIAGRAM FOR PARALLEL OPERATION*

DATE:

3-23-86

DATE REVISED:

06-01-01

DRAWING NUMBER:

0302-PM